
TRS-80®

Model 100 Portable Computer

BAR CODE WRITER

TERMS AND CONDITIONS OF SALE AND LICENSE OF RADIO SHACK
COMPUTER EQUIPMENT AND SOFTWARE PURCHASED FROM A
RADIO SHACK COMPANY-OWNED COMPUTER CENTER, RETAIL
STORE OR FROM A RADIO SHACK FRANCHISEE OR DEALER AT ITS
AUTHORIZED LOCATION

LIMITED WARRANTY

I. CUSTOMER OBLIGATIONS

- A. CUSTOMER assumes full responsibility that this Radio Shack computer hardware purchased (the "Equipment"), and any copies of Radio Shack software included with the Equipment or licensed separately (the "Software") meets the specifications, capacity, capabilities, versatility, and other requirements of CUSTOMER.
- B. CUSTOMER assumes full responsibility for the condition and effectiveness of the operating environment in which the Equipment and Software are to function, and for its installation.

II. RADIO SHACK LIMITED WARRANTIES AND CONDITIONS OF SALE

- A. For a period of ninety (90) calendar days from the date of the Radio Shack sales document received upon purchase of the Equipment, RADIO SHACK warrants to the original CUSTOMER that the Equipment and the medium upon which the Software is stored is free from manufacturing defects. THIS WARRANTY IS ONLY APPLICABLE TO PURCHASES OF RADIO SHACK EQUIPMENT BY THE ORIGINAL CUSTOMER FROM RADIO SHACK COMPANY-OWNED COMPUTER CENTERS, RETAIL STORES AND FROM RADIO SHACK FRANCHISEES AND DEALERS AT ITS AUTHORIZED LOCATION. The warranty is void if the Equipment's case or cabinet has been opened, or if the Equipment or Software has been subjected to improper or abnormal use. If a manufacturing defect is discovered during the stated warranty period, the defective Equipment must be returned to a Radio Shack Computer Center, a Radio Shack retail store, participating Radio Shack franchisee or Radio Shack dealer for repair, along with a copy of the sales document or lease agreement. The original CUSTOMER'S sole and exclusive remedy in the event of a defect is limited to the correction of the defect by repair, replacement, or refund of the purchase price, at RADIO SHACK'S election and sole expense. RADIO SHACK has no obligation to replace or repair expendable items.
- B. RADIO SHACK makes no warranty as to the design, capability, capacity, or suitability for use of the Software, except as provided in this paragraph. Software is licensed on an "AS IS" basis, without warranty. The original CUSTOMER'S exclusive remedy, in the event of a Software manufacturing defect, is its repair or replacement within thirty (30) calendar days of the date of the Radio Shack sales document received upon license of the Software. The defective Software shall be returned to a Radio Shack Computer Center, a Radio Shack retail store, participating Radio Shack franchisee or Radio Shack dealer along with the sales document.
- C. Except as provided herein no employee, agent, franchisee, dealer or other person is authorized to give any warranties of any nature on behalf of RADIO SHACK.
- D. Except as provided herein, **RADIO SHACK MAKES NO WARRANTIES, INCLUDING WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE.**
- E. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation(s) may not apply to CUSTOMER.

III. LIMITATION OF LIABILITY

- A. EXCEPT AS PROVIDED HEREIN, RADIO SHACK SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED OR ALLEGED TO BE CAUSED DIRECTLY OR INDIRECTLY BY "EQUIPMENT" OR "SOFTWARE" SOLD, LEASED, LICENSED OR FURNISHED BY RADIO SHACK, INCLUDING, BUT NOT LIMITED TO, ANY INTERRUPTION OF SERVICE, LOSS OF BUSINESS OR ANTICIPATORY PROFITS OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OR OPERATION OF THE "EQUIPMENT" OR "SOFTWARE". IN NO EVENT SHALL RADIO SHACK BE LIABLE FOR LOSS OF PROFITS, OR ANY INDIRECT, SPECIAL, OR CONSEQUENTIAL DAMAGES ARISING OUT OF ANY BREACH OF THIS WARRANTY OR IN ANY MANNER ARISING OUT OF OR CONNECTED WITH THE SALE, LEASE, LICENSE, USE OR ANTICIPATED USE OF THE "EQUIPMENT" OR "SOFTWARE".

continued

NOTWITHSTANDING THE ABOVE LIMITATIONS AND WARRANTIES, RADIO SHACK'S LIABILITY HEREUNDER FOR DAMAGES INCURRED BY CUSTOMER OR OTHERS SHALL NOT EXCEED THE AMOUNT PAID BY CUSTOMER FOR THE PARTICULAR "EQUIPMENT" OR "SOFTWARE" INVOLVED.

- B. RADIO SHACK shall not be liable for any damages caused by delay in delivering or furnishing Equipment and/or Software.
- C. No action arising out of any claimed breach of this Warranty or transactions under this Warranty may be brought more than two (2) years after the cause of action has accrued or more than four (4) years after the date of the Radio Shack sales document for the Equipment or Software, whichever first occurs.
- D. Some states do not allow the limitation or exclusion of incidental or consequential damages, so the above limitation(s) or exclusion(s) may not apply to CUSTOMER.

IV. RADIO SHACK SOFTWARE LICENSE

RADIO SHACK grants to CUSTOMER a non-exclusive, paid-up license to use the RADIO SHACK Software on **one** computer, subject to the following provisions:

- A. Except as otherwise provided in this Software License, applicable copyright laws shall apply to the Software.
- B. Title to the medium on which the Software is recorded (cassette and/or diskette) or stored (ROM) is transferred to CUSTOMER, but not title to the Software.
- C. CUSTOMER may use Software on one host computer and access that Software through one or more terminals if the Software permits this function.
- D. CUSTOMER shall not use, make, manufacture, or reproduce copies of Software except for use on **one** computer and as is specifically provided in this Software License. Customer is expressly prohibited from disassembling the Software.
- E. CUSTOMER is permitted to make additional copies of the Software **only** for backup or archival purposes or if additional copies are required in the operation of **one** computer with the Software, but only to the extent the Software allows a backup copy to be made. However, for TRSDOS Software, CUSTOMER is permitted to make a limited number of additional copies for CUSTOMER'S own use.
- F. CUSTOMER may resell or distribute unmodified copies of the Software provided CUSTOMER has purchased one copy of the Software for each one sold or distributed. The provisions of this Software License shall also be applicable to third parties receiving copies of the Software from CUSTOMER.
- G. All copyright notices shall be retained on all copies of the Software.

V. APPLICABILITY OF WARRANTY

- A. The terms and conditions of this Warranty are applicable as between RADIO SHACK and CUSTOMER to either a sale of the Equipment and/or Software License to CUSTOMER or to a transaction whereby RADIO SHACK sells or conveys such Equipment to a third party for lease to CUSTOMER.
- B. The limitations of liability and Warranty provisions herein shall inure to the benefit of RADIO SHACK, the author, owner and/or licensor of the Software and any manufacturer of the Equipment sold by RADIO SHACK.

VI. STATE LAW RIGHTS

The warranties granted herein give the **original** CUSTOMER specific legal rights, and the **original** CUSTOMER may have other rights which vary from state to state.

Bar Code Writer

TABLE OF CONTENTS

Introduction	1
Required Equipment	1
Loading the Program	2
Reference	3
Creating a Bar Code File	3
Bar Code Formats	4
Printing Bar Codes	6
Examples	8
Loading and Printing an Existing File	8
Creating and Printing a New File	11

Bar Code Writer Program:
©1984 Portable Computer Support Group, Inc.
Licensed to Tandy Corporation.
All Rights Reserved.

Bar Code BASIC Programs:
©1984 Tandy Corporation
All Rights Reserved

Bar Code Writer Manual:
©1984 Tandy Corporation
All Rights Reserved.

Reproduction or use, without express written permission from Tandy Corporation and/or its licensor, of any portion of this manual is prohibited. While reasonable efforts have been taken in the preparation of this manual to assure its accuracy, Tandy Corporation assumes no liability resulting from any errors or omissions in this manual, or from the use of the information contained herein.

INTRODUCTION

Bar Code Writer is an easy-to-use program created for your Model 100 that can convert text files that you create into bar code labels or listings. The Bar Code Writer program can produce six types of bar codes:

- Three of Nine
- Interleaved Two of Five
- Codabar
- Long UPC (UPC-A)
- Short UPC (UPC-E)
- Plessey

Bar Code Writer codes can be read with the Radio Shack Wand (Cat. No. 26-1183).

Read through the Reference section and then if you feel that you need practice, work through the examples at the end of this manual to become better acquainted with the program.

Required Equipment

- Model 100 Portable Computer with at least 24K RAM
- AC Power Supply (Cat. No. 26-3804) or 4 AA batteries
- Cassette recorder (CCR-81, Cat. No. 26-1208 is recommended)
- Radio Shack Printer
- Radio Shack Printer Cable (Cat. No. 26-1409)

Loading the Program

Follow the instructions below to load the Bar Code Writer program into your Model 100.

1. Make sure that your cassette recorder is properly connected, then insert the Bar Code Writer cassette tape, and rewind it completely.
2. Press the PLAY button on the recorder into a locked position.
3. Adjust the volume to about halfway (4 or 5).
4. On the Model 100, position the cursor at BASIC and press **(ENTER)**.
5. At the OK prompt, type **C** and press **(F2)**. The screen shows, Cload ".
6. Type **BCODE (ENTER)**.
7. The tape begins to play and after a few seconds the tape stops and the screen shows:

```
Found: BCODE
OK
```

8. Press **(F3)**, then type **BCODE (ENTER)**. The screen now shows:

```
Save "BCODE
OK
```

The Bar Code Writer program is now saved in your Model 100's memory. Press **(F8)** to return to the Model 100 Main Menu. The Bar Code Writer program is shown as BCODE.BA.

REFERENCE

Use this section as a reference tool when setting up your own bar codes. The section contains all the information needed to create and print your own bar codes. The files for the bar codes are created in the TEXT program of your Model 100. Refer to the Model 100 Owner's Manual for specific instructions on creating, editing, saving, and loading TEXT files.

Creating a Bar Code File

To create your own bar code, you must first create a file. These files can be named anything that indicates what the file contains. (For example, grocery items might be filed under names such as PRO, for produce, or CAN, for canned goods.)

After you create the file in the TEXT program of your Model 100, the Bar Code Writer program can then be used to print the file. You can create files that print as bar code only, or you can mix text and bar codes for all bar code types.

Bar Code Writer scans each line of the file that you created. If a line begins with an asterisk, Bar Code Writer prints it in bar code (excluding the asterisk). The letters (or numbers) appear beneath the bar code. One line of bar code is the same height as three printed lines. If a line does not begin with an asterisk, the program prints it exactly as it was typed.

You can type anything into a text file, but the lines that are designated for bar codes must fit the specifications for the bar code format that you choose. Choose one of the formats listed in "Bar Code Formats" and follow the instructions for that format when creating bar codes.

When you are ready to enter your own bar code information, position the cursor over TEXT at the Model 100 Main Menu and press **(ENTER)**. The screen shows: File to edit:

Name the file and press **(ENTER)**. Now, you are ready to create bar code files.

Bar Code Formats

The bar code formats shown below can be used with the Bar Code Writer Program to print bar codes which can then be read with a wand. Choose the format you want to use, and then follow the instructions for that format when creating bar codes.

UPCA

- Begin the line with an *.
- Use eleven **numeric** characters.
- The leading digit is usually a 0, but you may begin with a 2 for random weight items (produce, for example).
- Drugs and similar products can begin with a 3.
- 5, as a leading number, is reserved for coupons.

UPCE

- Begin the line with an *.
- Use six **numeric** characters.
- Bar Code Writer automatically inserts a leading 0, since a leading '1' is undefined.

3 of 9

- Begin the line with an *.
- Use only the characters shown below (maximum of 22 characters per line):

0123456789ABCDEFGHIJKLMNPOQRSTUVWXYZ-./ +%

All alpha characters must be capitalized.

Plessey

- Begin the line with an *.
- Use all numeric characters (maximum of 22 characters per line).

I 2 of 5

- Begin the line with an *.
- Use all numeric characters (maximum of 22 characters per line).

Codabar

- Begin the line with an *.
- Begin and end the text with one of the following pairs of Start/Stop tags (the first is the start, the second the stop tag):

a/t, b/n, c/*, or d/e

- Use the following set of characters to complete the line maximum of 22 characters per line):

0123456789-./ +

- For example, using b/n as a Start/Stop tag, a Codabar might look like this:

*b3635473n

Note: Each line in your text files that you want printed in bar code **must** begin with an asterisk.

Printing Bar Codes

After creating the bar codes using the chosen format, you are ready to print the file using the Bar Code Writer program.

First, make sure your printer is properly connected and turned on and loaded with labels or paper. At the Model 100 Main Menu, place the cursor on BCODE.BA and press **(ENTER)**. The screen displays:

Date	Time		(c) PCSG 84
UPCA	3 of 9	Plessey	Codabar
UPCE	I 2 of 5		
Select Bar Code to use.			Menu

Using the arrow keys, or spacebar, position the cursor on the selected bar code type and press **(ENTER)**. The screen shows: Using "bar code"? If this is the bar code you want to use, press **(Y)**.

The screen then displays a menu with your file names and the message, Select file to print. You must now select a document (.DO) file that you want to print.

Use the arrow keys (or spacebar) to position the cursor on the selected file and press **(ENTER)**. The screen then shows the message, Print "filename"? Press **(Y)** if you are sure this is the file you want to print.

The screen then displays the message:

Press any key when printer is ready

Now press any key on the Model 100 and receive a printout of the file exactly as you specified. Bar Code Writer scans and prints each line individually. Lines that begin with an asterisk (*) are printed in bar code.

Note: If you made a mistake when entering the bar code format, you will receive the message, * FORMAT ERROR *, in place of the bar code line on your printout. Check the bar code line in your text file to make sure you followed the correct format procedures for that bar code type.

If you do not want to print at this time, press **(FB) (ENTER)** to return to the Model 100 Main Menu.

To stop the printing temporarily, press **(PAUSE)** on your Model 100, and then press it again to resume printing.

To stop printing entirely, press **(FB)**. The Model 100 Main Menu then appears.

Experiment with the bar code types until you find a format that best suits your needs.

EXAMPLES

This section is designed to help you become more comfortable with the Bar Code Writer program. After working through the examples, you can begin to create your own bar codes, using the information contained in the Reference Section.

Loading and Printing an Existing File

Load the Bar Code Writer program into your Model 100 following the instructions in "Loading the Program." Now you are ready to load one of the sample text files (UPCAS) from the program cassette tape.

Make sure the cassette recorder is properly connected and the tape is rewound. Press the PLAY button to a locked position. At the Model 100 Main Menu, position the cursor over TEXT and press **(ENTER)**.

The screen shows:	You respond:
File to edit?	UPCAS (ENTER) .
←	(F2) .
Load from:	UPCAS (ENTER) .

After the file has finished loading, the screen displays:

```
Sweet Corn      16oz   $1.20
Reorder level:  1 case
*02400001443
←
←
```

This is an example of how a file using the UPCA format might be set up. The top two lines contain valuable inventory information, and the Bar Code Writer program prints the lines exactly as they appear. The third (bar code) line is written in the UPCA format. It contains an asterisk followed by eleven numeric characters beginning with a 0.

Now you are ready to print the UPCAS file. Make sure that your printer is properly connected to the Model 100 and that it contains paper.

Return to the Model 100 Main Menu by pressing **(F8)**. The UPCA file you loaded into the computer appears on the Main Menu as UPCAS.DO.

Position the cursor over BCODE.BA and press **(ENTER)**. the screen shows a list of possible bar code formats:

Date	Time	(c) PCSG 84
UPCA	3 of 9	Plessey Codabar
UPCE	1 2 of 5	
Select Bar Code to use.		Menu

Since the file you are going to print was set up in the UPCA bar code format, make sure the cursor is positioned on UPCA and press **(ENTER)**. The message, Using UPCA?, appears. Press **(Y)**.

The screen now shows the UPCAS.DO file (and other document files, if any) that you loaded into the computer along with the message, Select File to Print.

Position the cursor on the UPCAS.DO file and press **(ENTER)**. The screen shows, Print UPCAS.DO? press **(Y)**. The screen then displays the message:

Press any key when printer is ready

After you press a key, the printer begins to print the sample file.

Sweet Corn 16 oz \$1.20
Reorder level:1 case



0 2400001443

When the printing is complete you return to the document file menu. Press **(F8)** to return to the Model 100 Main Menu.

Note: Load the remaining sample files (UPCES, B3OF9S, I2OF5S, PLESYS, and CDABRS) the same way you loaded UPCAS and then see each bar code type in printed form. Refer to "Loading and Printing an Existing File" in this section if you need help.

Creating and Printing a New File

Now follow the instructions below to create a file, using the 3 of 9 format.

At the Model 100 Main Menu, position the cursor over TEXT and press **(ENTER)**.

The screen shows: File to edit? Type **SAMPLE (ENTER)**. Now type the following text:

- * THIS IS AN EXAMPLE OF
- * HOW TYPEWRITTEN WORDS
- * CAN BE CONVERTED TO A
- * BAR CODE FORMAT.

This is an example of how a 3 of 9 bar code file might be set up. The bar code actually uses 12 lines when it is printed (3 lines per bar code line).

Now you are ready to print the sample file. Return to the Model 100 Main Menu by pressing **(F8)**. The file you set up appears on the menu as SAMPLE.DO.

Position the cursor on BCODE.BA and press **(ENTER)**. The screen shows the list of possible bar code formats and displays the message, Select Bar Code to use. Since you set up the sample file using the 3 of 9 format, position the cursor on 3 of 9 and press **(ENTER)**. The message, Using 3 of 9?, appears. Press **(Y)**.

The screen now displays a menu of the document files contained on your Model 100. Position the cursor on SAMPLE.DO and press **(ENTER)**. The question, Print SAMPLE.DO?, appears. Press **(Y)**. Now the screen shows: Press any key when printer is ready. Press any key and the printer begins to print the SAMPLE file.



THIS IS AN EXAMPLE OF



HOW TYPEWRITTEN WORDS



 
CAN BE CONVERTED TO A



BAR CODE FORMAT.

When the printing is complete, press **(F8)** to return to the Model 100 Main Menu.

You can enter more items in the sample files that are already in the computer's memory, or experiment with the other bar code sample files contained on the cassette tape. Then choose the bar code type that is right for you.

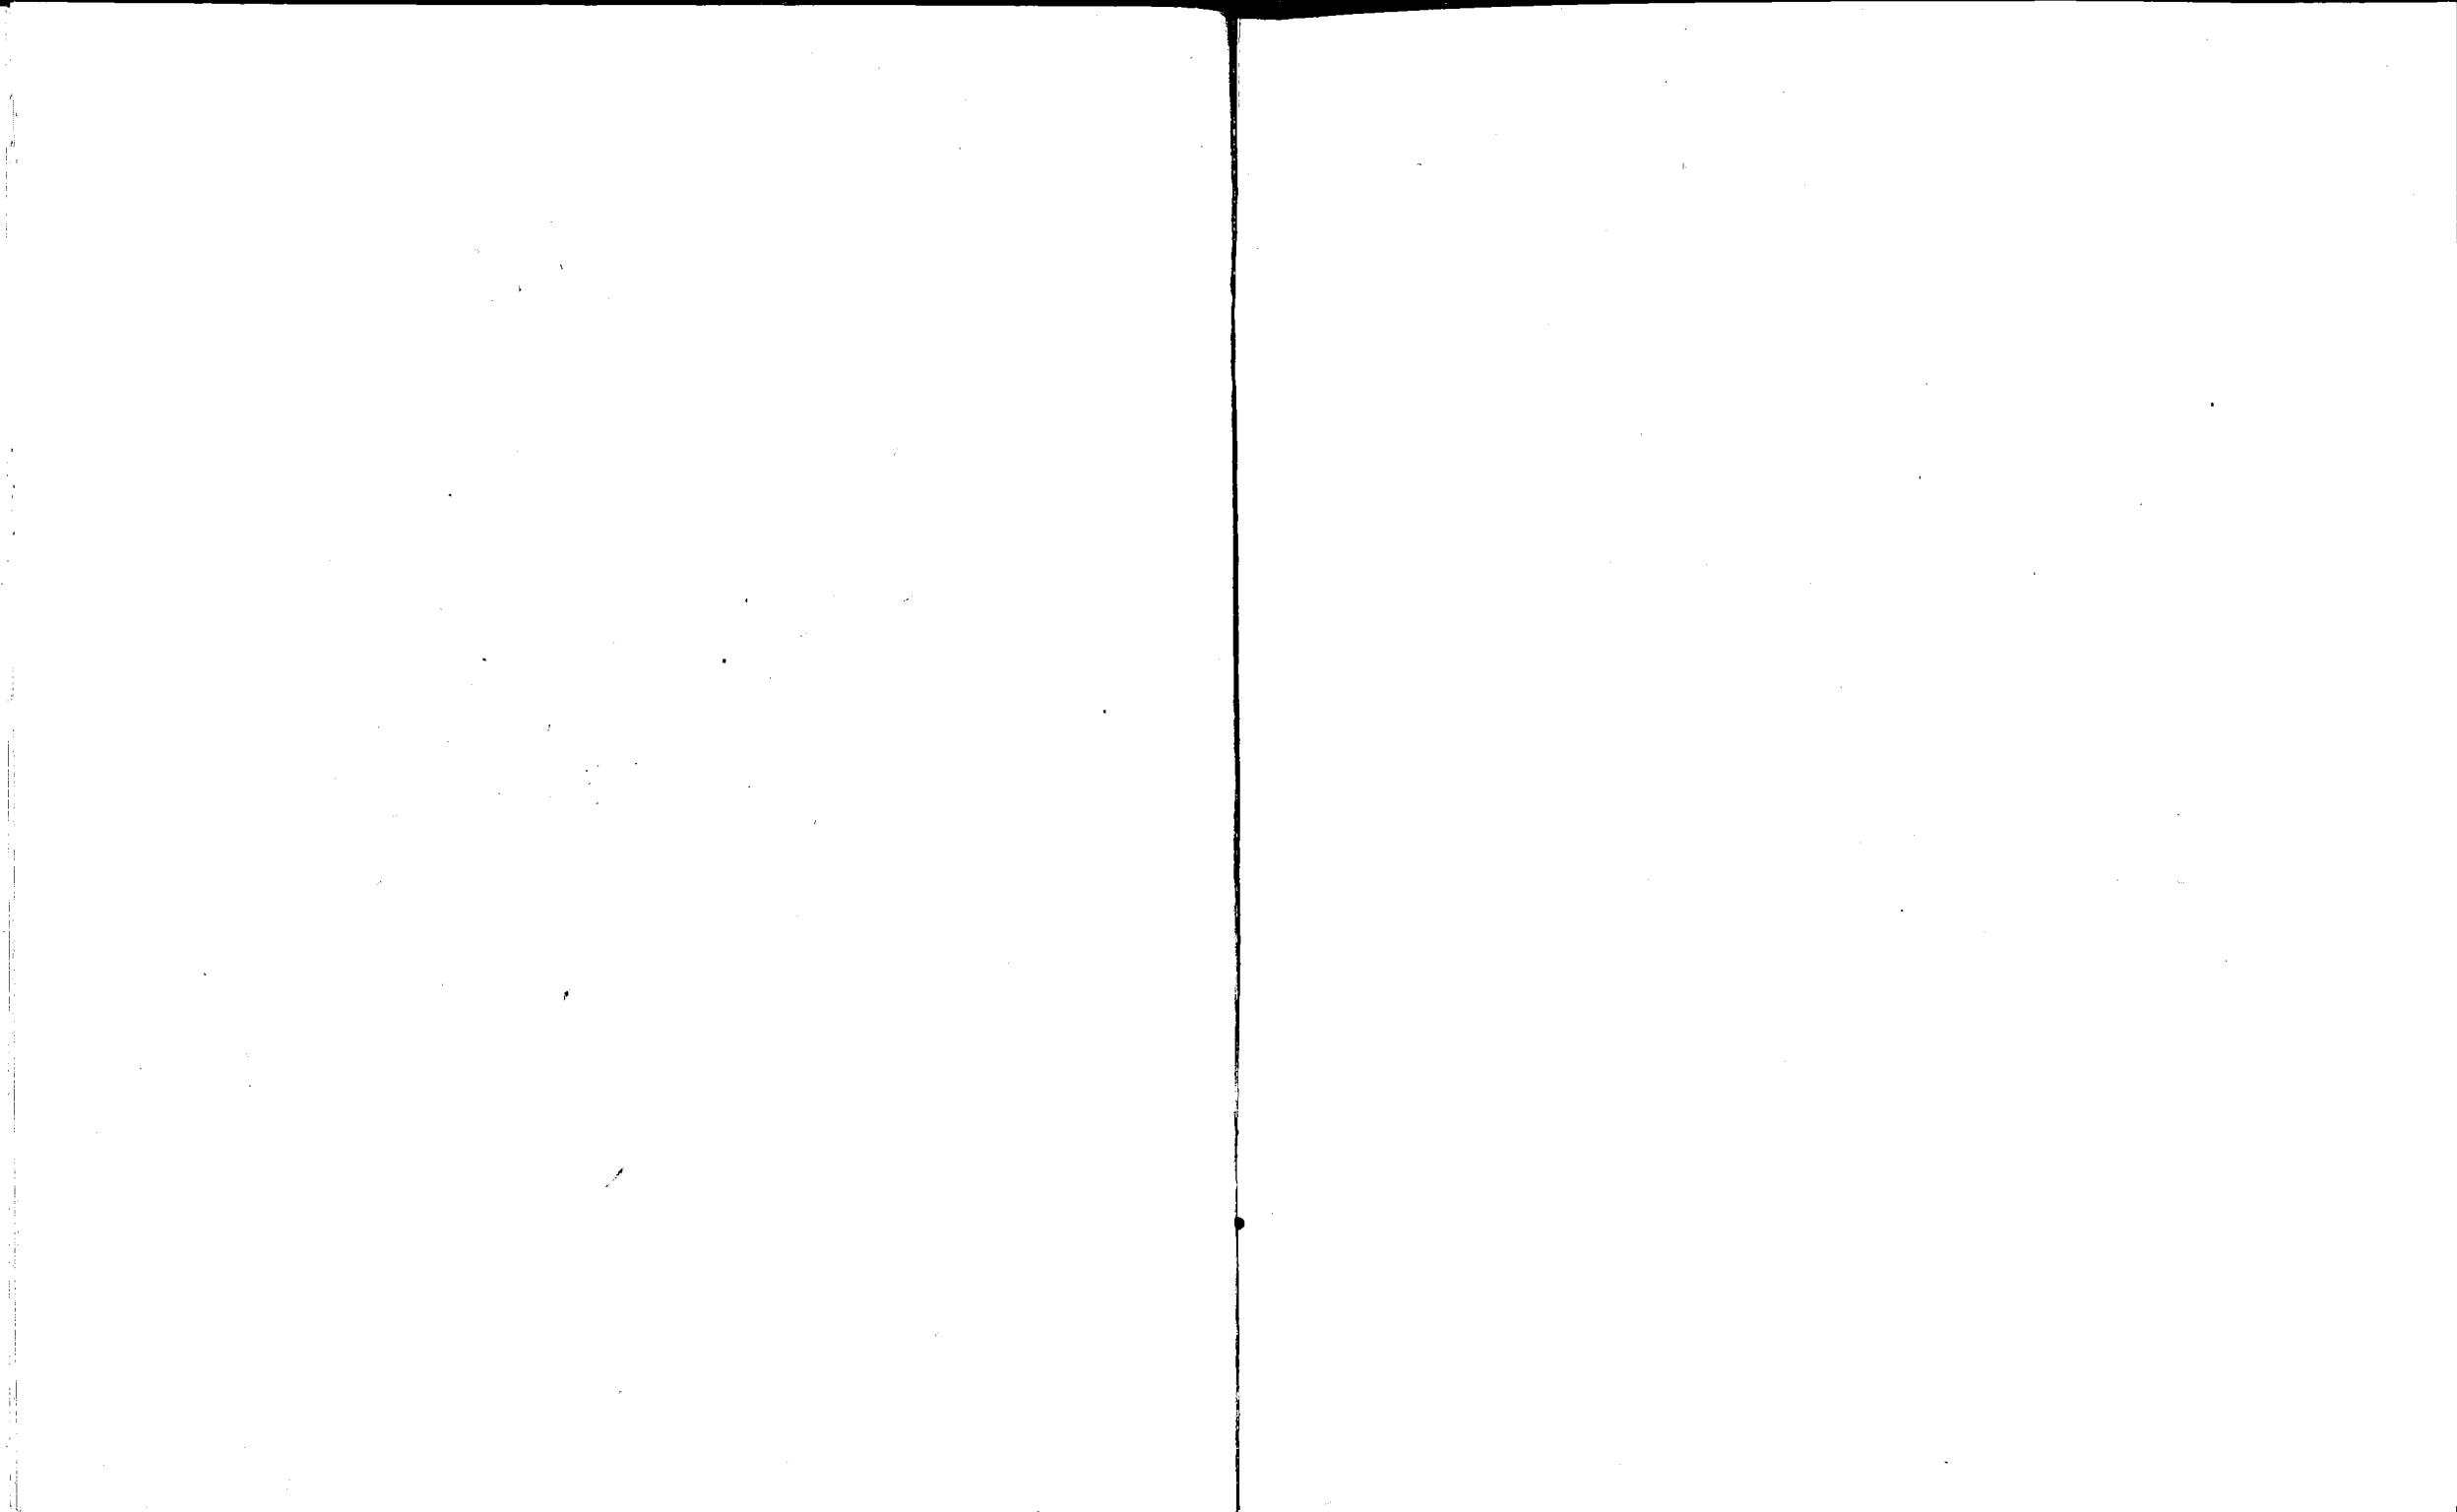

Cat. No. 26-3845

2/85-TM

Printed in U.S.A.