

---

**TRS-80®**

---

**Model 100 Portable Computer**

---

**SCRIPSIT® 100**  
**Quick Reference**

---

**SCRIPSIT® 100 QUICK REFERENCE**

## Function and Command Summary

**Bottom margin.** WSPEC file only — set the number of blank lines you want in `Bottom Margin`.

**Centering.** Embed `.C` before text, `.N` after text. For entire document, change `Format` symbol to `C` in the WSPEC file.

**Chapter end.** Embed `.P` to advance to the top of the next page.

**Date.** WSPEC file only — put `%D` in the `Header` or the `Footer`. Allow eight spaces to print the date.

**Document end.** Automatic — advances to bottom of page and prints footer.

**Dot command rules.** Each on a separate line. Carriage return before and after command. Flush left. Period at beginning. Capital letters only.

**Extra line after carriage return.** WSPEC file only — change `Extra Line on Paragraph` to `0` for off, `1` for on.

**Extra page at end of document.** WSPEC file only — set `Feed Page at End` to `1` to feed the extra page, or `0` to suppress the extra page feed.

**Footer.** WSPEC file only — type `Footer` text; insert `%D` for the date, `%T` for the time, `%P` to number the pages. Allow eight spaces each for the date and time, and two spaces for page numbers.

**Footer switch.** Embed `.F0` to turn off the footer, or `.F1` to turn on the footer. For the entire document, set `Footer Switch` to `0` or `1` in the WSPEC file.

**Format.** See "Centering" and "Justified right margin."

**Global printer commands.** WSPEC file only — insert **CTRL (P)** before each printer command. Type the commands at **Setup Strings** in the WSPEC file.

**Header.** WSPEC file only — type **Header** text; insert **%D** for the date, **%T** for the time, **%P** to number the pages. Allow eight spaces each for the date and time, and two spaces for page numbers.

**Header switch.** Embed **.H0** to turn off the header, or **.H1** to turn on the header. For the entire document, set **Header Switch** to **0** or **1** in the WSPEC file.

**Indented paragraph.** Embed **.Ln**, and then another **.Ln** to restore. (*n* is the *number* of spaces to indent.)

**Justified right margin.** Embed **.J** before text, **.N** after text. For entire document, change **Format** symbol to **J** in the WSPEC file.

**Last page to print.** See "Selective page printing."

**Left margin.** Embed **.Ln** before text. (*n* is the *number* of spaces to skip.) Remains in effect until reset. For entire document, set **Left Margin** in WSPEC file.

**Line length.** WSPEC only — set to correct width for paper. 10 characters per inch is normal. Note that this cannot exceed your printer width, and cannot be less than the longest word in your text.

**Line spacing.** Embed **.Sn** to space *n* lines apart. For the entire document, change **Line Spacing** value in WSPEC.

**Manual form feed for non-continuous paper.** See "Pause between pages."

**Margins.** See appropriate entry for left, right, top, or bottom margin.

**Number of beginning page in document.** WSPEC file only — for a document file which is a continuation of a larger document, change **Number of Beginning Page in Document** to the number you wish to assign to the first page of this file.

**Number of copies.** See "Print multiple copies."

**Number of text lines to print per page.** WSPEC file only — set the number of lines you want to print on each page in **Printing Lines/Page**. Include the header, top margin, text lines, bottom margin, and footer.

**Numbered pages.** WSPEC file only — put **%P** in the **Header** or the **Footer**. Allow two spaces to print page number.

**Omit duplicate pages.** See "Number of beginning page in document."

**Output to a device.** WSPEC file only — type **LPT:** for parallel printer, **LCD:** for screen only, **CAS:filename** (6 character maximum) to save to cassette, **filename** (6 character maximum) to save formatted copy to another Model 100 file, or **COM:xxxxx** for serial printer or to communicate with another computer.

**Page numbering.** WSPEC file only — put %P in the Header or the Footer. Allow two spaces to print the page number.

**Paper length.** WSPEC file only — set Lines Per Page at correct length. 6 lines per inch is usual.

**Paper width.** WSPEC only — set Line Length at correct width for paper. 10 characters per inch is normal. Note that this width cannot exceed your printer width.

**Pause between pages.** WSPEC file only — enter 0 for no, 1 for yes in Pause Between Pages. (For non-continuous forms.)

**Print multiple copies.** WSPEC file only — change Number of Copies to desired number.

**Redirectable output.** See "Output to a device."

**Right margin.** Embed .Rn before text. (n is the number of spaces to skip.) Remains in effect until reset. For entire document, set Right Margin in WSPEC file.

**Selective page printing.** WSPEC file only — change Start Printing at Page to the number of the first page you want to print, and Last Page to Print to the number of the last page you want to print.

**Setup string.** See "Global printer commands."

**Skip lines.** Creates open space. Embed .Un in the text.

**Start printing at page.** See "Selective page printing."

**Tabs.** Embed .Ln at beginning of paragraph or use the (TAB) key. Only the first "tab" setting at the beginning of each paragraph is used.

**Time.** WSPEC file only — put %T in the Header or the Footer. Allow eight spaces to print the time.

**Title page.** Embed .Un to line feed, .C to center all following text, then .P for a new page (if the title is the only text on the page). Header Switch and Footer Switch should be set to 0 in WSPEC, or in text (.H0 and .F0).

**Top of page.** Automatic after document end. Advances paper to top of next page.

**Top margin.** WSPEC file only — set the number of blank lines you want in Top Margin.

## Summary of Dot Commands

- .C** Center text which follows
- .Fn** Footer control (0 = no 1 = yes)
- .Hn** Header control (0 = no 1 = yes)
- J** Justify right margin
- .Ln** Set left margin to *n* number of spaces
- .Mn** Start a new page unless a minimum of *n* lines will fit on the current page
- .N** Ragged, or normal, right edge
- .P** Start a new page (chapter end)
- .Rn** Set right margin to *n* number of spaces
- .Sn** Line spacing
  - 0 = no line feed except after carriage return (Use only when `Extra Line on Paragraph` is set to 1.)
  - 1 = single space text
  - 2 = double space text
  - 3 = triple space text
- .Un** Move paper up *n* lines (skip lines)

**Cat. No. 26-3830**

®

WILSON  
JONES